



OPTI-RED®

For red wines roundness and smoothness

Description

OPTI-RED® is a specific inactivated yeast (SIY) that has undergone a specific preparation process to obtain a high level of polyphenol-reactive cell-wall polysaccharides. Using OPTI-RED® in the must provides early high molecular weight polysaccharides availability for complexing with polyphenols as soon as the polyphenols are released and diffused.

This early formation of polysaccharides-polyphenols complexes results in red wines with more intense colour, rounder mouthfeel and better tannin integration. OPTI-RED® can be used alone or in conjunction with oenological maceration enzymes.



OMRI (Organic Materials Review Institute) is a US national nonprofit organization that determines which input products are allowed for use in organic production and processing.

Application and results

• Increase of polyphenolic stability

Impact of yeast polysaccharides is limited to their availability due to natural yeast autolysis at the end of primary fermentation. With the use of selected natural yeasts known to excrete high amounts of polysaccharides during the growth phase, tannin and polysaccharide complexes formation begins earlier. These polysaccharides can be made available at the beginning of maceration by adding OPTI-RED® to the must. Figure n°1 illustrates how adding OPTI-RED® at the beginning of red wine-making impacts on the content and stability of tannins and the astringency of wine.

	Control	OPTI-RED®	
Tannins (g/L)	2.60	2.70	<i>Same quantity of tannins</i>
Ethanol Index	8,50	14.00	<i>More complexes polysaccharides-tannins</i>
BSA Index.....	11.50	6.80	<i>Less astringency</i>

Figure n°1: PINOT NOIR, Burgundy (France) - 2000
OPTI-RED® at 30 g/hL at beginning of maceration. Analysis 3 months after bottling.





• Increase of colour stability


Polyphenol colloid precipitation can be avoided in the presence of available polysaccharides which have a “protection” function that prevents precipitation of high molecular weight polyphenol colloids. Therefore, polyphenols show better stability during aging when they are protected by OPTI-RED® polysaccharides thanks to the formation of anthocyanin-tannin-polysaccharide complexes. After adding OPTI-RED® at the early stages of red winemaking, wines show less color loss before and during aging.

• Increase of mouthfeel (roundness and smoothness)

Polysaccharides have a positive impact on mouthfeel, bringing more roundness to the wine. Figure n°2 shows the impact of OPTI-RED® addition on wine sensorial quality: more mouthfeel, less astringency & better overall quality.

Figure n°2: Grenache, 2000. ▶
Experimental winery, INRA, Montpellier (France).
OPTI-RED® at 30 g/hL during maceration.
Sensory values from 1-10, Professional tasters (14)

Adding OPTI-RED® at the beginning of fermentation is particularly interesting for low phenolic potential grapes, low maturity harvests and/or high yield, to enhance stability of the early extracted polyphenols (prefermentative maceration, thermovinification,...) and for primeur wines.

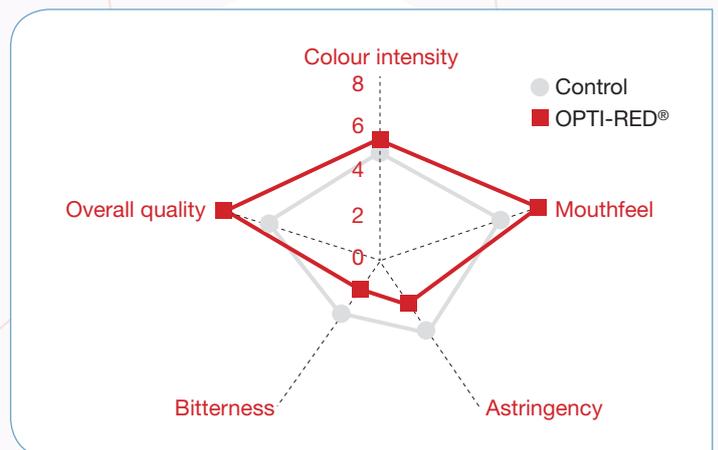

Dosage and instructions for use

- Recommended average dosage is 20 to 40 g/hL (1.7 to 3.4. lb per 1000 U.S gallon).
- Suspend OPTI-RED® in ten times its weight of water or juice and mix.
- Add to the must at the beginning of fermentation.
- OPTI-RED® is a specific inactivated yeast; thus it contains naturally amino acids and minerals. So OPTI-RED® also contributes to the nutritional content available for yeast even though it does not replace the regular nutrition program.

Packaging and storage

- 1 kg, 2.5 kg or 10 kg sealed alu foil bags.
- Store in a dry environment below 25°C.

DISTRIBUTED BY:

The information herein is true and accurate to the best of our knowledge however this data sheet is not to be considered as a guarantee expressed or implied or as a condition of sale of this product.

November 2014